

SHARP

EXTENTION RAM BOARD

MODEL **MZ-1R22**

INSTRUCTION MANUAL



Introduction

Congratulations on your purchase of the SHARP [MZ-1R22] EXTENSION RAM BOARD. This board is designed to be installed in the special EXTENTION RAM BOARD slot of the expansion unit (MZ-1U07) connected to the MZ-5600 Series.


Note

Do not touch the bottom of this board or the ICs, because static electricity might damage the ICs.

Note that the aluminum foil lapping this board is to protect the ICs from static electricity. Be sure, therefore, to remove the foil immediately before installation.

Installation

1. Turn OFF the power switch of the MZ-5600 Series, and then install the expansion unit (MZ-1U07).
(Please refer to the MZ-5600 OWNER'S MANUAL.)
2. Remove the screws first, and then the slot cover (center) for the main board slot of the expansion unit
3. Insert the board into the slot along the slot guide, in the direction of the arrow.
4. Put the slot cover back and tighten it with the screws.
5. Please refer to the MZ-5600 OWNER'S MANUAL for information concerning confirmation of correct installation.

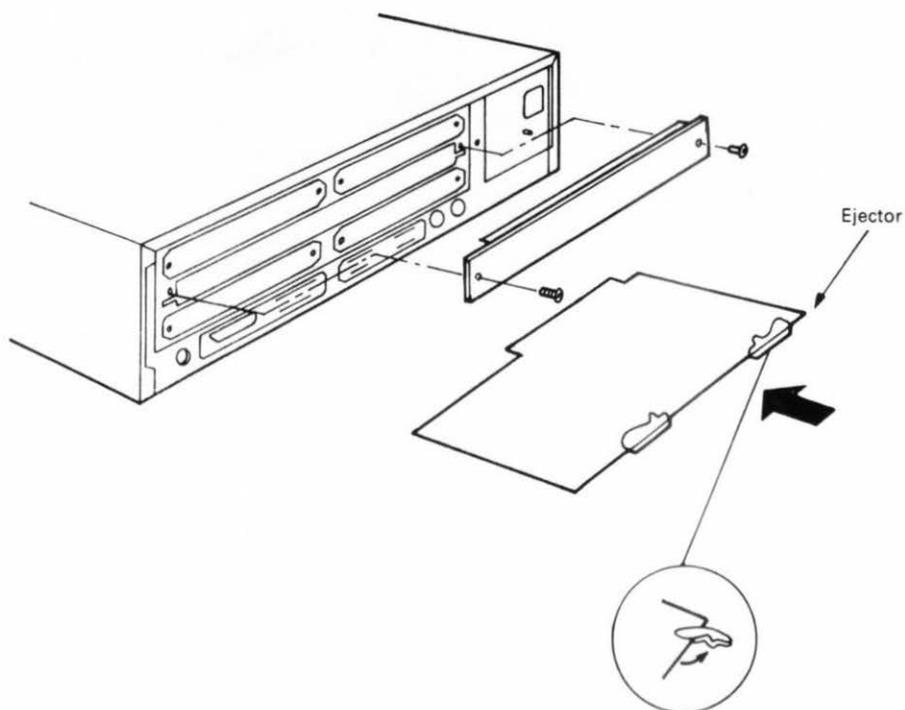

For removal, pull out in direction of arrow so that the ejectors can stay up.

Note:

When removing this board, pull out the ejectors at both ends (see right side of figure above), and then pull the board straight out with holding the ejectors.

SHARP CORPORATION
OSAKA, JAPAN

Printed in Japan
Gedruckt in Japan
Imprimé au Japon
Stampato in Giappone

© 1984 SHARP CORPORATION
4H 0.202-1 (TINSE1161ACZZ)